

BLADE 130 S HELICOPTER Main Blade Grip w/ Thrust Bearing/Titanium Ball INSTRUCTION








MICROHELI CO., LTD.


COPYRIGHT © 2017 MICROHELI®

1 MAIN BLADE GRIP W/ THRUST BEARING/TITANIUM BALL MH-130S002



Apply Loctite to all screws

| | | |
|---|---|---|
| 3mm Titanium Ball | 2.6x5.2x0.9mm Brass Spacer | 2.5x6x1.8mm Radial Bearing |
| x2 | x2 | x4 |
| 2.6x4.5x1.05mm Aluminum Spacer | 2.6x5.2x1.0mm Brass Spacer | |
| x2 | x2 | |
| M1.6x8mm Cap Screw | 2.5x6x3mm Thrust Bearing | |
| x2 | x2 | |

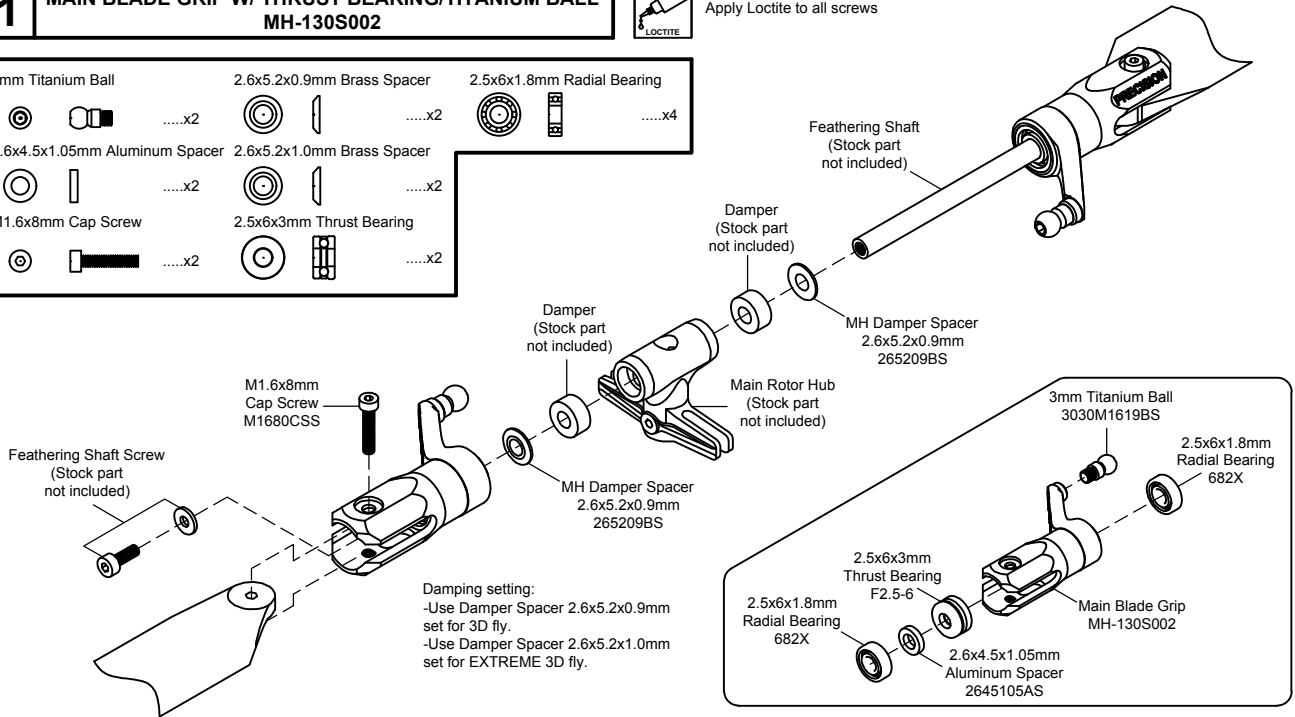

Apply Loctite

CAUTION: Please check your model helicopter carefully before attempt to fly!

REV. 130S002-230817-03