

BLADE 180 CFX HELICOPTER Main Blade Grip w/ Thrust Bearing/Titanium Ball INSTRUCTION

MICROHELI CO., LTD.










COPYRIGHT © 2017 MICROHELI®


1

MAIN BLADE GRIP W/ THRUST BEARING/TITANIUM BALL MH-18FX002



Apply Loctite to all screws

3mm Titanium Ball x2	2.5x5.5x0.6mm Brass Spacer x2	2.5x6x1.8mm Radial Bearing x4
2.5x4.5x1.1mm Aluminum Spacer x2	2.5x5.5x0.7mm Brass Spacer x2	2.5x6x3mm Thrust Bearing x2
2.5x4x1.8mm Aluminum Spacer x2	2.5x5.5x0.8mm Brass Spacer x2	M1.6x8mm Cap Screw x2

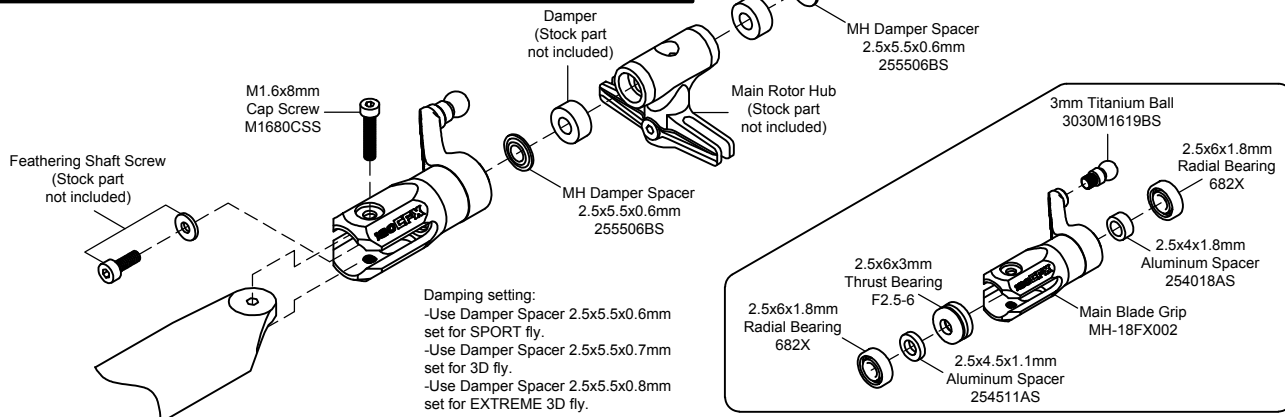

Apply Loctite

CAUTION: Please check your model helicopter carefully before attempt to fly!

REV. 18FX002-051214-01

01