

BLADE 180 CFX HELICOPTER Airbrush Fiberglass Red Meteorite Fuselage set INSTRUCTION

MICROHELI CO., LTD.

COPYRIGHT © 2017 MICROHELI®

1


AIRBRUSH FIBERGLASS RED METEORITE FUSELAGE SET MH-18FX-FLRM



Apply Loctite to all screws

1x4mm Stainless Steel Pin

.....x2

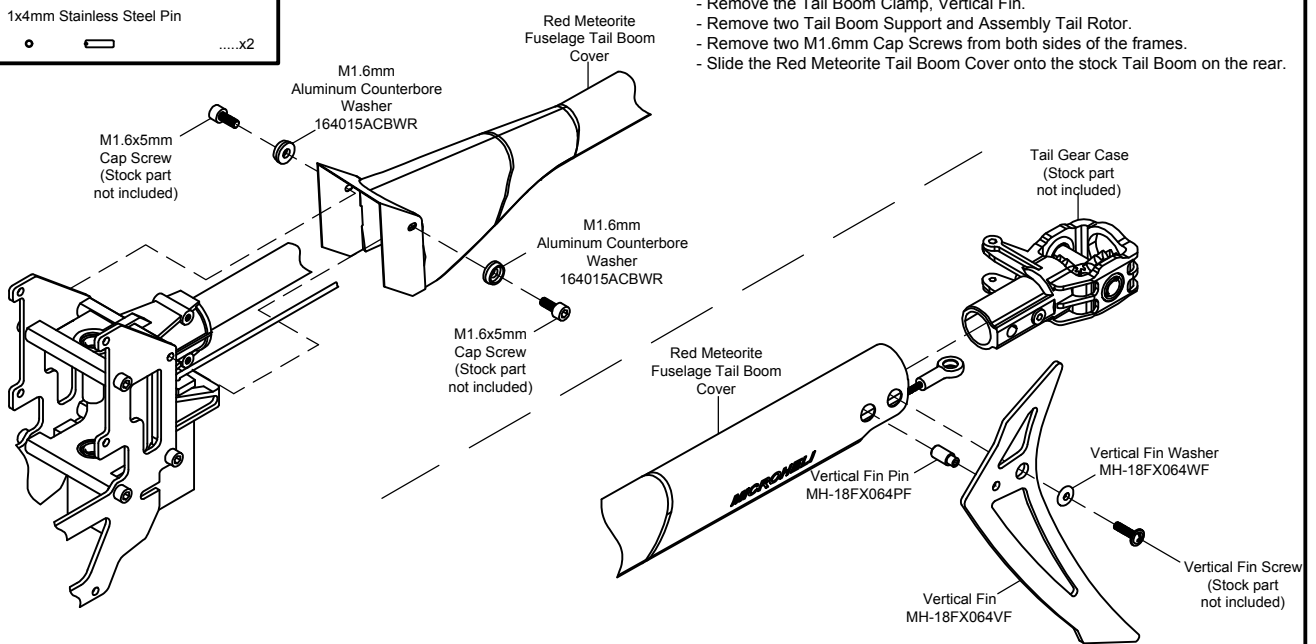

- Remove the Tail Boom Clamp, Vertical Fin.
- Remove two Tail Boom Support and Assembly Tail Rotor.
- Remove two M1.6mm Cap Screws from both sides of the frames.
- Slide the Red Meteorite Tail Boom Cover onto the stock Tail Boom on the rear.



Apply Loctite

CAUTION: Please check your model helicopter carefully before attempt to fly!

REV. 18FX-FLRM-290115-01

01

BLADE 180 CFX HELICOPTER Airbrush Fiberglass Red Meteorite Fuselage set INSTRUCTION

MICROHELI CO., LTD.

COPYRIGHT © 2017 MICROHELI®


2

AIRBRUSH FIBERGLASS RED METEORITE FUSELAGE SET MH-18FX-FLRM



Apply Loctite to all screws

Install the Red Meteorite Fuselage canopy from front of the helicopter. Mount the canopy over the canopy mounting bolt.

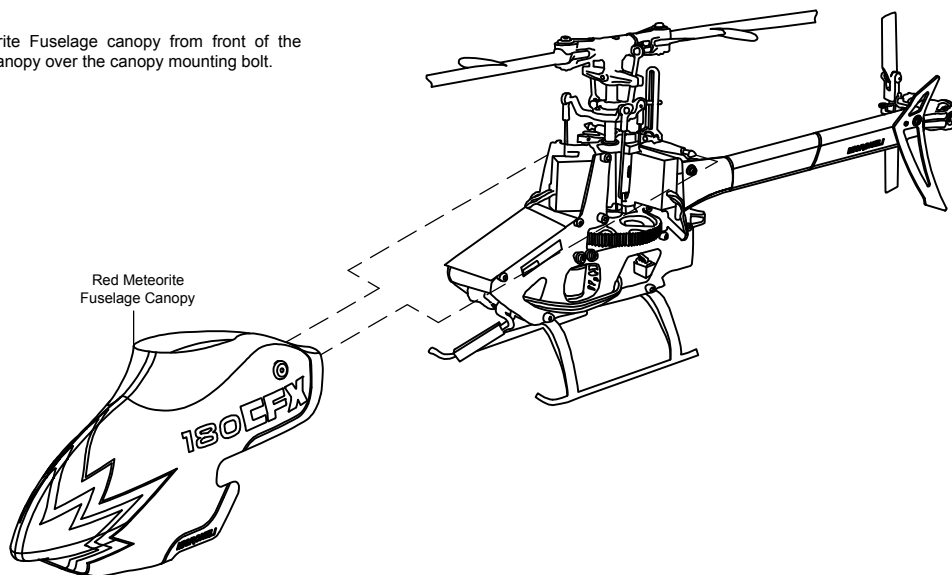

Apply Loctite

CAUTION: Please check your model helicopter carefully before attempt to fly!

REV. 18FX-FLRM-290115-01

02